

Locked Stock & Barrel Assembly

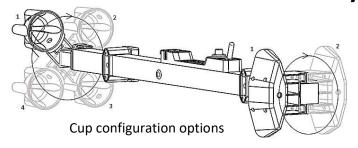

 
Left handed user

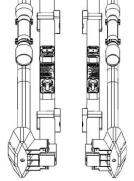



Right handed user

Muzzle Cup Installation Instructions

Ideal assembly orientation for easy access with dominant hand




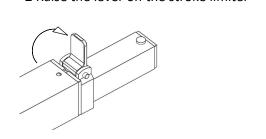

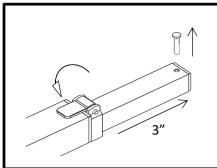


2 Carefully extend/pull the silver extension tube out about 3 inches, push the lever on the stroke limiter down to lock the tube from retracting and remove the lock pin


3 Slide the muzzle cup onto the extension tube

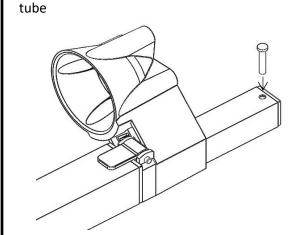


4 Insert the lock with the head of the pin orientated with the cavity on the muzzle holder

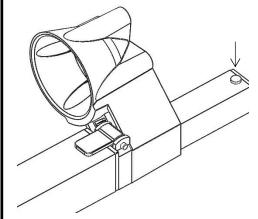

5 Slide the muzzle cup out and over the lock pin head and tighten screw firmly

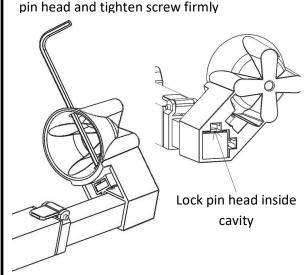


6 While holding the muzzle cup and black extension tube, raise the lever on the stroke limiter and slowly let the tube contract

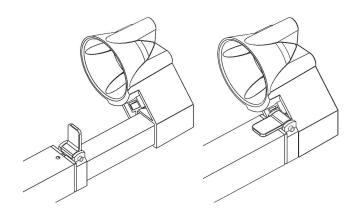

Do Not lift the stroke limiter lever unless both tubes are being held or the tubes will retract quickly

Buttstock Holder Installation Instructions

1 Slide the buttstock holder over the main tube, insert the keeper pin into the hole in the main tube on the same side as the buttstock holder

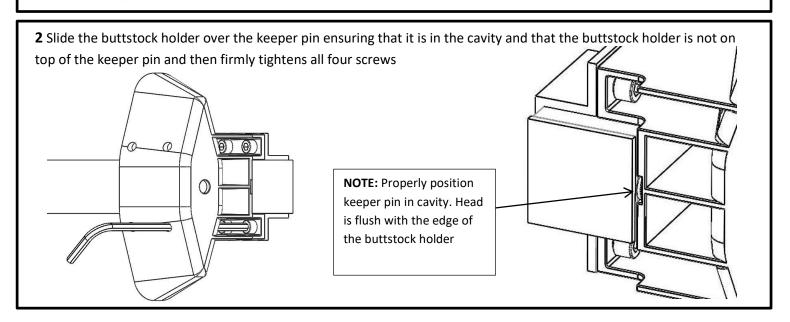

Optional Buttstock Holder Installation for firearms 28" to 36" OAL and with OAL less than 36" w/stock collapsed

